

## How To Replace Your Wind Sensor Batteries


### Step 1

Locate the arrow, then nudge and remove wind sensor.




### Step 2

Release the tab from the back of the sensor and remove the old batteries.

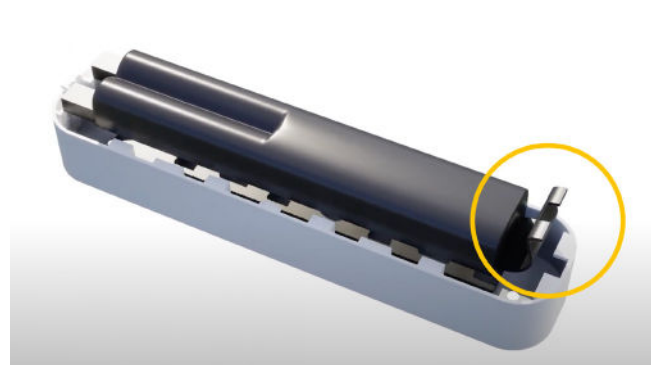

### Step 3

Insert two (2) - AAA batteries into control panel.

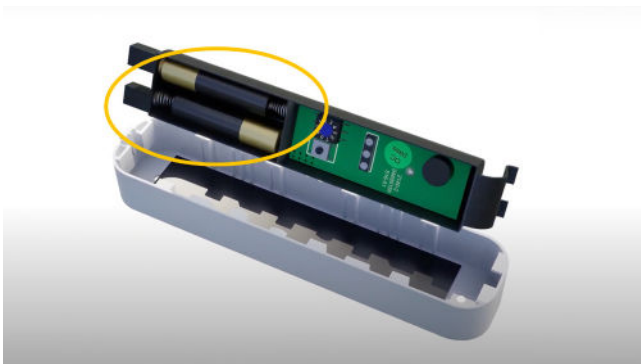

### Step 4

Line up the grooves, slide in and nudge the opposite way.

